etexco EX Series Treiber Installation Kurzanleitung





"Install NiceLabel Printer Drivers" wählen um die Treiber zu installieren.

This wizard will help you install your printer driver. If you want to install a USB printer, connect the printer to the computer and use the Windows Found New Hardware wizard instead
Click <next> to begin the installation procedure.</next>
Version: 5.3.43 Copyright (C) 2000-2016 Euro Plus d.o.o. All Rights Reserved.

"Next" oder "Weiter" wählen um fortzufahren.

•	Install Printer Installs one or multiple printers on the system.					
0	<u>Uninstall Printer</u> No installed printer found.					
	<u>Remove Preloaded Drivers</u> No previously preloded drivers found.					

"Install Printer" wählen.

License Agreement Please read the followir	ng license agreement carefully.	Ì
NICELABEL	PRINTER DRIVERS - WINDOWS	
DRIVERS	FOR THERMAL PRINTERS	-
LICE	NSE AND LIMITED WARRANTY	
NiceLabel Printer Drivers are t by the NiceLabel software pro and fastest printout speeds c	rue Windows printer drivers that can be used for label printing oducts or any third-party Windows application. Optimal results an be best obtained from the NiceLabel software products.	
The only two allowable distrib NiceLabel CD-ROM/DVD and c (http://www.nicelabel.com). \	ution channels of NiceLabel Printer Drivers are from the downloadable distributions on the NiceLabel website /ou may not distribute, lease or rent NiceLabel Printer Drivers	
I accept the terms in the lice	ense agreement	
C. I do not accept the terms in	n the license agreement	

Lizenzbestimmungen bestätigen.

Select Printer Please select the manufacturer and printer you want to install.					
elect the manufacturer and mo rinter came with a driver media,	del of your printer. If the driver is in a different folder or your click <change location="">. If your printer is not listed, consult</change>				
our printer documentation for a	compatible printer.				
lanufacturers:	Printers:				
Rongta	Rongta RP2xx Series				
	Rongta RP3xx Series Bongta BP4vx Series				
	Rongta RP5xx Series				
	Kongta RP8xx Series				
	Change leasting				

Den Treiber "Rongta RP4xx Series" wählen

Die Schnittstelle wählen (in der Regel USB)

Die USB Schnittstelle ist ein virtueller port ihres Rechners. Sie müßen sicherstellen, dass das USB Kabel eingesteckt ist und der Drucker eingeschaltet ist.

Bei mehreren USB Druckern an ihrem Rechner erscheinen mehrere virtuelle USB ports, z.B. USB001, USB002 ... USB005 ..., etc. Sie müßen den richtigen USB Port hier wählen, an welchem der Drucker eingesteckt ist.

Printer Options Please select port,	printer name and languag	ge.	2			
Enter the name for your ; done, select <finish> to</finish>	printer. Also, select the p install the printer and add	ort your printer d an icon to the	is connected to. When you ar Printers folder.			
Driver version:	5.1.15.6331					
Printer <u>n</u> ame:	Rongta RP4xx Seri	Rongta RP4xx Series				
A <u>v</u> ailable ports:						
LPT2:			Add TCP/IP Port			
RongtaUSB POR SHRFAX: USB PORT	T:		Dejete Port			
USB001						
XPSPort:		<u> </u>				
I want to use the second se	I want to use this printer as the Windows default printer.					
Select language:	English		•			
ooloot langaago.						